

Inspecting bearings

Application Note

Thermal images of electrical systems can indicate the operating condition of the equipment in those systems. In fact, since the beginning of thermography more than four

decades or more ago, the principal commercial application for thermal imaging has been electrical system inspection.

Many predictive maintenance (PdM) programs use thermography to monitor the apparent temperatures of operational equipment, using the heat values to detect and avoid equipment loss. By using thermal imagers to capture two-dimensional infrared maps of bearing and housing temperatures, technicians can compare current operating temperatures to benchmarks and detect potential failures.

What to check?


Generally speaking, vibration analysis is the PdM technology of choice for monitoring large, accessible, relatively high-speed bearings, but it can only be done safely when transducers can be placed on the bearings. For bearings that are relative small (e.g., in conveyor rollers), in low-speed operations, physically inaccessible or unsafe to get close to while the equipment is

running, thermography is a good alternative to vibration analysis. In most cases, thermography can be performed at a safe distance while the equipment is operating. Capturing a thermal image with a handheld imager also takes less time than performing vibration analysis.

Mechanical equipment should be inspected when it has warmed up to steady state conditions and is running a normal load. That way, measurements can be interpreted at normal operating conditions. Capture a thermal image of the bearing to be checked, and if possible, capture images of bearings in the same area performing the same or a similar function, e.g., the bearing at the other end of a conveyor or paper machine roller or another pillow block on the same shaft.

What to look for?

Problems with bearings are usually found by comparing the surface temperatures of similar bearings working under similar conditions. Overheating conditions appear as “hot spots” within an infrared image and are usually found by comparing similar equipment. In checking motor bearings, this procedure entails comparing end bell (for motors and bearings of the same type) or stator to end bell temperatures.

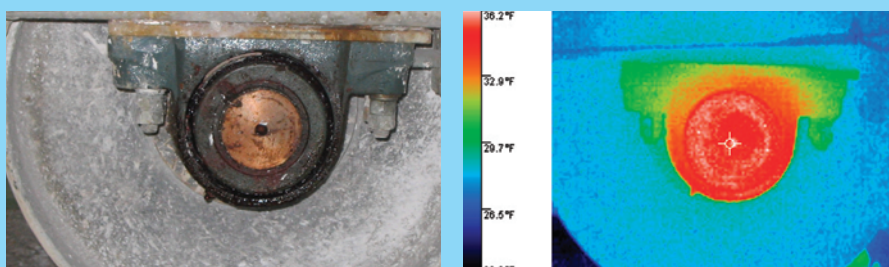

This overheating shaft and bearing may be an indicator of bearing failure, lack of proper lubrication, or misalignment.

In general, it is a good idea to create a regular inspection route that includes all critical rotating equipment. If a route for regular vibration analysis already exists, thermography can be added easily to these existing bearing-monitoring efforts. In any case, save a thermal image of each piece of key equipment on a computer and track your measurements over time, using the software that comes with the thermal imager. That way, you'll have baseline images for comparison. They will help you determine whether a hotspot is unusual or not and help you verify when repairs are successful.

What represents a "red alert?"

Equipment conditions that pose a safety risk should take the highest repair priority. Beyond that, determining when action is required in your facility to keep a bearing from causing the loss of a crucial piece of equipment is an case-by-case undertaking that gets easier with experience. For example, on one difficult-to-monitor line, an auto manufacturer moved from vibration analysis to a combination of vibration and thermography to determine that normal operating temperatures for bearings on the line fell within a specific range. The company's PdM personnel, well trained in thermography, now treat a bearing running above the upper limit of the normal operating range as an

"alarm" situation.

When using thermography on bearings not normally monitored using vibration analysis or even when spot-checking bearings, try to follow the lead of the automotive company and establish some "alarm" criteria, as you would for other condition-monitoring technologies. Some thermography experts, for example, have established rules-of-thumb for allowable temperature differentials ((Ts) for bearings on specific types of equipment using specific lubrication techniques (grease, oil bath, etc.).)

What's the potential cost of failure?

For a failed bearing in a specific motor, pump, drive or some other critical component, you can do analysis of the cost of the repair, lost production opportunity and lost labor costs. At one automotive facility, the estimated cost of the failure of a specific pump is more than €15,000 for repairs plus lost production of €30,000 per minute and labor costs of more than €600 per minute. Keeping that pump running is worth the effort.

Follow-up actions

All rotating equipment generates heat at the friction-bearing points in the system - the bearings. Lubrication reduces friction and thereby reduces and to varying degrees (depending upon the type of lubrication) dissipates the

heat. Thermal imaging lets you literally "picture" this process while revealing the condition of bearings. When thermal images indicate an overheating bearing, you should generate a maintenance order to either replace the bearing or lubricate it. Vibration analysis or another PdM technology may help you determine the best course of action.

Whenever you discover a problem using a thermal imager, use the associated software to document your findings in a report, including a thermal image and a digital image of the equipment. That's the best way to communicate problems you find and to suggest repairs.

Fluke. *Keeping your world up and running.*

Fluke Corporation
P.O. Box 9090
Everett, WA USA 98206

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

For more information call:
In the U.S.A. (800) 443-5853
or Fax (425) 446-5116
In Europe/M-East/Africa +31 (0)40 2 675 200
or Fax +31 (0)40 2 675 222
In Canada (905) 890-7600
or Fax (905) 890-6866
From other countries +1 (425) 446-5500
or Fax +1 (425) 446-5116

Visit us on the world wide web at:
www.fluke.com

Fluke (UK) Ltd.
52 Hurricane Way
Norwich
Norfolk
NR6 6JB
United Kingdom
Tel.: (020) 7942 0700
Fax: (020) 7942 0701
E-mail: industrial@uk.fluke.nl

Visit us on the world wide web at:
www.fluke.co.uk

© Copyright 2005, Fluke Corporation.
All rights reserved.
Printed in the Netherlands 09/05
Data subject to alteration without notice.
Pub_ID: 10981-eng

An imaging tip

Modify equipment guards and covers on conveyor systems and drive components so that bearings and couplings can be inspected using thermography. Consider installing a small, hinged door or using metal mesh instead of solid metal. In making any of these kinds of changes, be sure not to compromise personnel's safety.